

frontrow™

lasso



USER GUIDE

5301R Receiver

940TM Pendant Microphone

950H Pass-Around Microphone

950C Microphone Charger

Contents

| | |
|---|---------|
| Important Safety Instructions | 1 |
| Electrical Warnings | 2 |
| 950C Charger | |
| Chapter 1 Features | 3 |
| Chapter 2 Charger Setup | 4 |
| 940TM Pendant Microphone | |
| Chapter 3 Features | 5 |
| Chapter 4 Installing Battery and Charging | 6 - 7 |
| Chapter 5 Using | 8 |
| 950H Pass-Around Microphone | |
| Chapter 6 Features | 9 |
| Chapter 7 Setting channel, installing battery and charging | 10 - 11 |
| Chapter 8 Using Pass-Around Microphone | 12 - 13 |
| Chapter 9 Using a Second Transmitter | 14 |
| 5301R Lasso Receiver | |
| Chapter 10 Features | 15 |
| Chapter 11 Activate Receiver and Microphone | 16 |
| Chapter 12 Connecting to other Classroom Media | 17 - 19 |
| Chapter 13 Auxiliary Output - Rebroadcasting to Personal FM Receivers | 20 |
| Chapter 14 Troubleshooting | 21 |
| Chapter 14 Regulatory | 22 |



The FrontRow Lasso is manufactured to conform to the most stringent European guidelines for consumer products (RoHS) – it is produced using a process free of lead and other materials harmful to the environment.



The FrontRow Lasso is listed with Educational Underwriters, a non-profit organization committed to serving educators seeking to meet No Child Left Behind (NCLB) requirements and to establishing best practices in education. EdU reviews the research behind educational programs and products to verify that they meet NCLB requirements and high educational standards. For additional information regarding Educational Underwriters, go to www.educationalunderwriters.org.



The FrontRow Lasso System conforms to the stringent electrical safety standards set by Underwriters Laboratory (UL).



Your 940TM Pendant Microphone, 950H Pass-Around Microphone, and 950C Charger use SmartCharge technology. The microphone will only charge the "silver-sleeve", auto-sensing battery that comes with our microphone. If an incompatible battery is detected, the microphone will not let you charge the battery. This prevents accidental damage.

You may use standard alkaline batteries in your microphones if you forget to charge them, but do not attempt to charge alkaline batteries separately. To ensure proper charging, always be sure that only "silver sleeve" auto-sensing batteries are installed.



Energy Smart saves money (and maybe the planet). Our products use significantly less energy – up to 63% less – than other systems. That makes FrontRow a smart choice for schools and the environment.

IMPORTANT SAFETY INSTRUCTIONS

1. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
2. Read these instructions.
3. Keep these instructions.
4. Heed all warnings.
5. Follow all instructions.
6. Do not use this apparatus near water.
7. Clean only with dry cloth.
8. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not use batteries that have been dropped or otherwise damaged.



ELECTRICAL WARNINGS

1. Avoid Abuse to the Power Supply

To reduce risk of electric shock, unplug the power supply from outlet before attempting any maintenance or cleaning. Turn off controls will not reduce this risk.

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

DO NOT disassemble the power supply. Return the apparatus to Phonic Ear FrontRow for qualified service and repair if service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.

DO NOT expose the power supply to rain, snow, water, gas, oil, etc.

DO NOT operate the power supply if it has received a sharp blow, been dropped, or otherwise damaged in any way; return the apparatus to Phonic Ear FrontRow for qualified service and repair.

DO NOT block or cover the apparatus and impede ventilation.

DO NOT expose batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire, or the like.

2. Proper Use of the Power Supply and Wiring

An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire and electric shock. The cord **MUST** be plugged into a grounded outlet. Make sure it is properly wired, in good electrical condition, and wire size is large enough for AC ampere rating of the power supply or charger as specified below. AWG = American Wire Gauge.

To reduce risk of damage to plug and cord when disconnecting the power supply or charger, **ALWAYS** pull on plug - **NEVER** on cord.

Locate cord so that it will not be stepped on, tripped over, or otherwise subject to damage or stress. **DO NOT** lay extension cord on charger.

DO NOT operate the power supply with damaged cord or plug - replace them immediately.

ELECTRICAL SAFETY INFORMATION:



PRECAUTIONS & SAFETY RECOMMENDATIONS

Follow Manufacturers' Recommendations


Before using the receiver and power supply, read all instructions for, and caution markings on the receiver and power supply and in this user guide.

1 950C Charger



Features



1. Charge pocket for 950H Pass-Around microphone
2. 2-way indicator light for 950H Pass-Around microphone
No light = Pocket empty or improper battery
Red = Charging
Blinking red = Charge error
Green = Charging complete
3. Charge pocket for 940TM Pendant microphone (will not charge 930TM pendant microphone)
4. 2-way indicator light for 940TM Pendant microphone
No light = Pocket empty
Red = Charging
Blinking red = Faulty or improper battery
Green = Charging complete
5. Power supply input

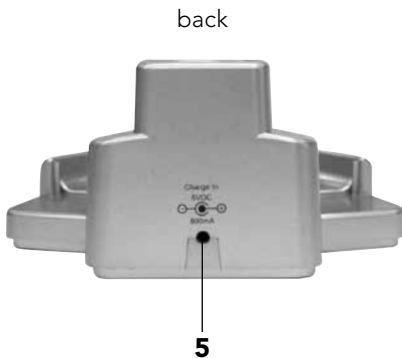


2 950C Charger Setup

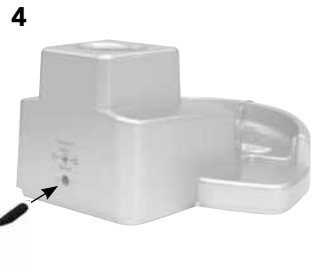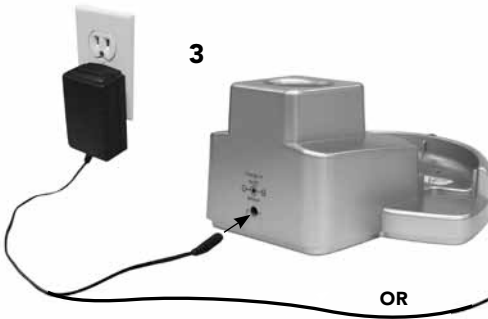

OR

OR



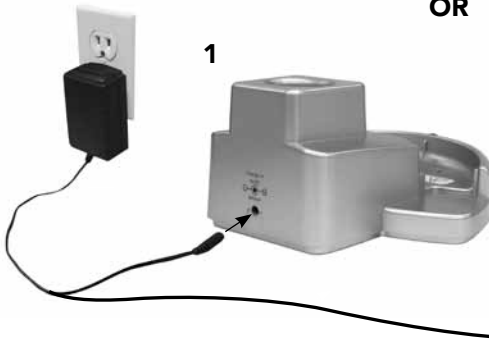


1. Find the power plug that is appropriate for the power outlet style in your country
2. Slide power plug onto the power supply
3. Plug power supply into power outlet and into the back of the charging base
4. **Charging multiple microphones**

You can charge up to 3 microphones in any configuration by connecting two chargers to the power supply. **Charging 4 or more microphones will cause the power supply to shut off.**

3 940TM Pendant Microphone

Features

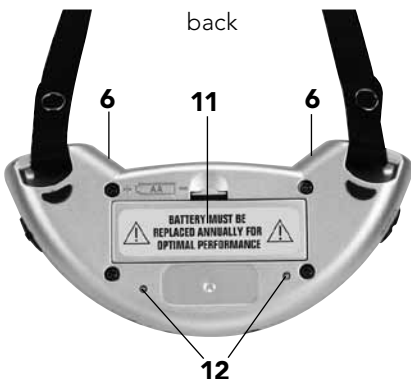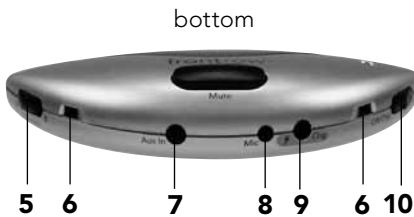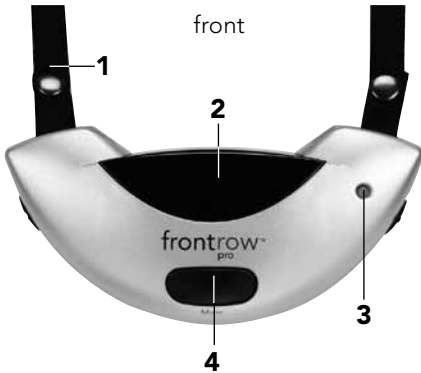

1. Neck strap
2. Infrared emitter diodes
(Do not block)
3. Indicator Light
4. Mute button
(Push to mute)
5. Channel selector
(Select Channel A or Channel B.
Cannot have two microphones on the
same channel in the same room)
6. Microphone ports (4)
(Do not block)
7. Aux-in audio jack
(Use aux-in audio adaptor cord to
send audio from a secondary audio
source such as an MP3 player, portable
radio/CD/tape player to the receiver)
8. External microphone jack (optional)
(Connect a boom microphone)
9. Charge jack
(When not using 950C charger)
10. On/off switch
11. Battery compartment
(1) AA (LR6) NiMH rechargeable battery
(FrontRow "silver sleeve", auto-sensing)
12. Charge contacts
940TM only. 930TM is not supported by
950C charger.

4 940TM Pendant Microphone


Installing Battery and Charging



Install Battery

1. Push down on tab to open battery compartment
2. Insert battery into compartment. Note polarity indicators
3. Replace battery door
4. Charge battery overnight before initial use

IMPORTANT! To ensure top performance and avoid equipment damage, FrontRow recommends replacing rechargeable batteries at the beginning of each school year. Do not use batteries that have been dropped or are otherwise damaged.

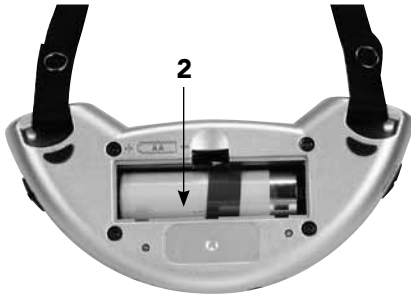

Charge Battery Nightly

1. Indicator light will blink red when battery is low


NOTE: If you forget to charge your microphone at night, you may use a standard AA (LR6) alkaline battery instead. Remember to remove the alkaline battery and replace it with a FrontRow "silver-sleeve", auto-sensing battery before charging the unit.



IMPORTANT! In order to prevent damage to your microphone, the SmartCharge feature is intended to prevent charging of any battery other than the "silver sleeve" auto-sensing battery supplied by FrontRow. To ensure proper charging, always be sure that only FrontRow "silver sleeve" auto-sensing batteries are installed.

940TM Pendant Microphone

Charging with the 2-unit wall charger

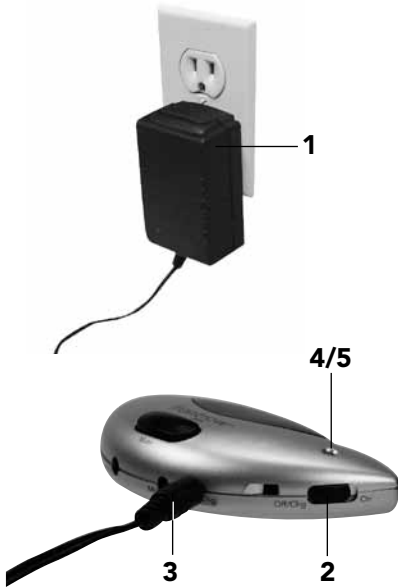

1. Plug the two-microphone wall charger into a power outlet
2. **Turn microphone off**
3. Insert one of the charge cord plugs into the charge jack
4. The microphone indicator light should be red when charging. If it is **OFF**, check microphone battery and ensure charge cord is properly connected to microphone and receiver


Charging with the 950C charger



1. **Turn microphone off**
2. Place microphone face up into the charge pocket. Ensure it is fully seated.
3. The charger indicator light should be solid red when charging. If it is **blinking red**, you are attempting to charge an alkaline battery or the battery is damaged. Replace this battery with a FrontRow "silver sleeve" NiMH cell. If the light is off, ensure charger is properly connected to power supply and that you are charging a 940TM microphone (930TM microphones cannot be charged in this charger). Re-check the seating.
4. The charger indicator light will turn green when charging is complete.

5 940TM Pendant Microphone

Using

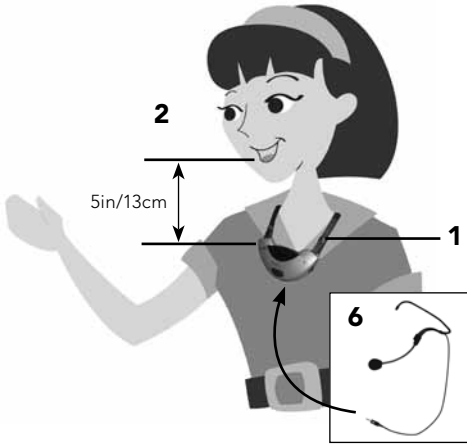

1. Place microphone around neck and connect clasp
2. Adjust neck straps to position microphone approximately 5in (13cm) from mouth
3. Set channel to A or B (whichever is not already in use)
4. Turn microphone on. Indicator light should be green
5. Press mute switch as needed for private conversations. Indicator light will blink green
6. **Optional:** if desired, plug in external boom microphone

Light Legend

- Green On
- Blinking Green Muted
- Blinking Red Low Battery

When Charging with 950C charger


- No light Charging

When Charging with 2-unit wall charger only

- No light Alkaline Battery is detected, or microphone power is still on
- Red Charging



940TM (bottom)

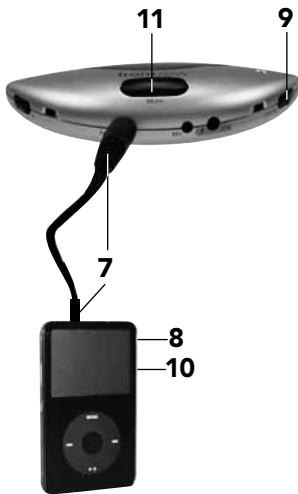

The 940TM Pendant Microphone can be used to transmit audio from a secondary audio source (MP3 player, computer, portable radio/CD/tape player) to the receiver.


7. Plug one end of the audio adaptor cord (included) in the **Audio Out/headphone jack** of the secondary audio source. Plug the other end of the adaptor cord to the **Aux-In** jack on the 940TM Pendant Microphone
8. Turn the secondary audio source on
9. Turn the 940TM Pendant Microphone on
10. Turn the volume on the secondary audio source all the way up and adjust the microphone volume on the receiver to obtain the optimal volume
11. You can "talk over" the secondary audio by speaking into the microphone or mute the microphone to ensure the best audio sound quality

6 950H Pass-Around Microphone

Features




1. Emitter diodes
(Do not block)
2. 2-way indicator light
Green = On and transmitting
Blinking red = Low battery
Red = Charging via 3.5mm charge
input jack only
No light = Charging via 950C charger
3. On/off switch
4. Battery compartment
(On back)
5. Gain switch
(Inside battery compartment)
6. Channel switch
(Inside battery compartment)
7. Name plate
8. Charge input jack
(Use with 2-unit charge cord only)
9. Aux input jack
10. Lavalier clip
11. 950C charger contacts

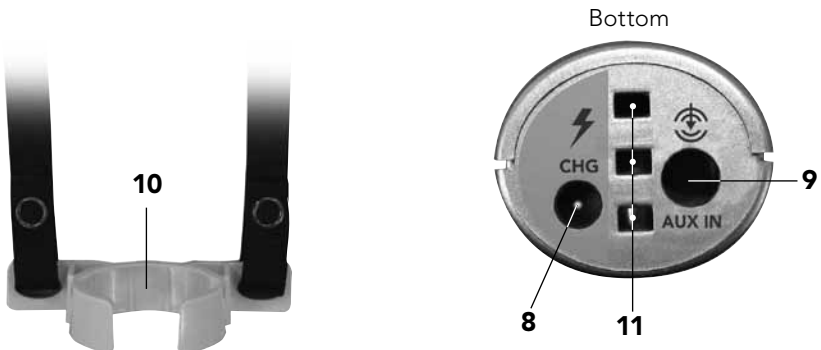

7 950H Pass-Around Microphone

Setting gain, channel, installing battery, and charging

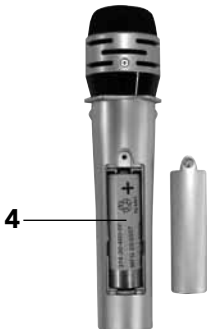

Set gain and channel, and install battery

1. Unscrew battery door to open battery compartment
2. Set gain as follows:
High: If majority of users will hold the microphone far from the mouth
Mid (recommended): For most uses
Low: If majority of users will hold the microphone close to the mouth
3. Set channel to A or B (Whichever is not in use)
4. Insert battery into compartment. Note polarity indicators
5. Replace battery door
6. Charge battery overnight before initial use

IMPORTANT! To ensure top performance and avoid equipment damage, FrontRow recommends replacing rechargeable batteries at the beginning of each school year. Do not use batteries that have been dropped or are otherwise damaged.

Charge Battery Nightly


Indicator light will blink red when battery is low

NOTE: If you forget to charge your microphone at night, you may use a standard AA (LR6) alkaline battery instead. Remember to remove the alkaline battery and replace it with a FrontRow "silver-sleeve", auto-sensing battery before charging the unit.

IMPORTANT! In order to prevent damage to your microphone, the SmartCharge feature is intended to prevent charging of any battery other than the "silver sleeve" auto-sensing battery supplied by FrontRow. Do not attempt to charge alkaline batteries separately. To ensure proper charging, always be sure that only FrontRow "silver sleeve" auto-sensing batteries are installed.


950H Pass-Around Microphone

Charging with the 2-unit charge cord

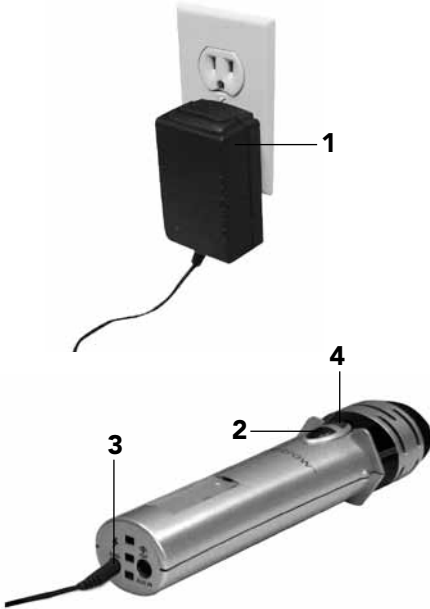

1. Plug the two-microphone wall charger into a power outlet
2. **Turn microphone off**
3. Insert one of the charge cord plugs into the charge jack
4. The microphone indicator light should be red when charging. If it is **OFF**, ensure that you are not attempting to change an alkaline battery, and that charge cord is properly connected to microphone and receiver and 950H is **OFF**.





Charging with the 950C charger

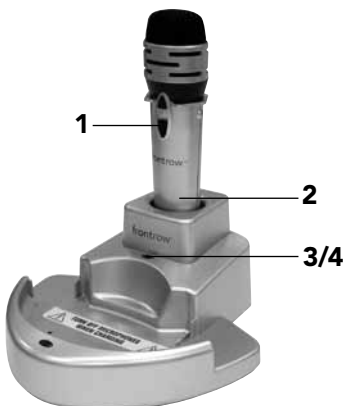

1. **Turn microphone off**
2. Place microphone into the charge pocket. Ensure it is fully seated.
3. The charger indicator light should be solid red when charging. If the light is off, ensure charger is properly connected to power supply and that you are not attempting to charge an alkaline battery.
4. The charger indicator light will turn green when charging is complete and unit will enter maintenance mode.


8 950H Pass-Around Microphone

Using

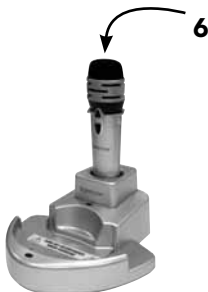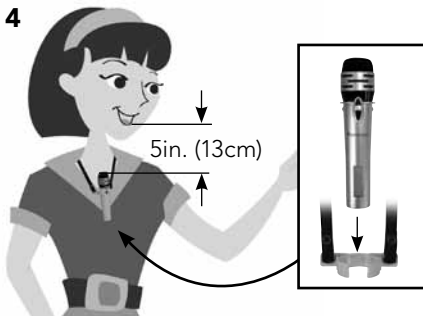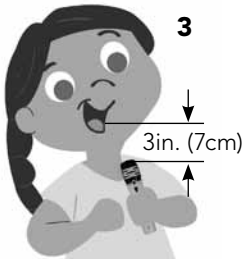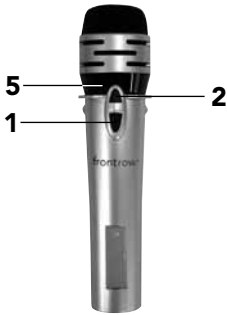


1. Turn microphone on
2. Note indicator light
Green = On and transmitting
Blinking red = Low battery
3. Keep top of microphone approximately 3 - 4in. (7.5 - 10cm) from mouth when using as a hand-held microphone
4. To allow hands-free use (for example, when reading aloud and turning pages), attach the lavalier clip. Adjust neck strap to position microphone approximately 4 - 5in (10 - 13cm) from mouth.
5. Do not block emitter diodes
6. Turn off microphone and place microphone in charger at the end of the day

NOTE: The 950H is factory set on Channel B. If you are using two microphones, they must be on different channels.

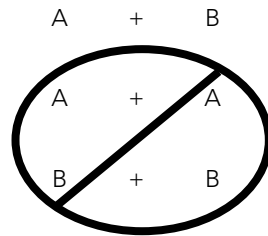

950H Pass-Around Microphone

Using (cont.)

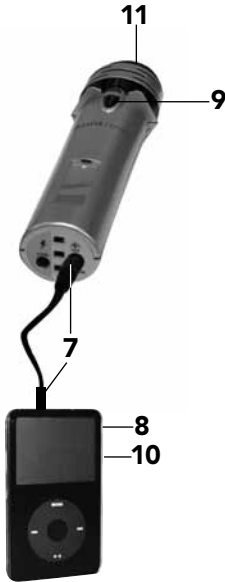

The 950H Pass-Around Microphone can be used to transmit audio from a secondary audio source (MP3 player, computer, portable radio/CD/tape player) to the receiver.

7. Plug one end of the audio adaptor cord (included) in the **Audio Out/headphone jack** of the secondary audio source. Plug the other end of the adaptor cord to the **Aux-In** jack on the 950H Pass-Around Microphone
8. Turn the secondary audio source on
9. Turn the 950H Pass-Around Microphone on
10. Turn the volume on the secondary audio source all the way up and adjust the microphone volume on the receiver to obtain the optimal volume
11. When using this feature the microphone audio is disabled

9 Using a Second Microphone

Classroom 1



teacher 1
(channel A)



teacher 2
(channel B)

Your receiver is designed to receive two microphone signals at once. For example, two teachers (or a teacher and an aide) may each use a microphone. Or, one teacher can use a microphone and students can use a pass-around microphone.

Microphones must be on different channels or interference will occur.


Classroom 2



teacher
(channel A)




student
(channel B)

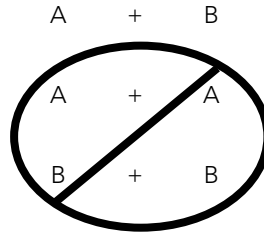


10 5301R Lasso Receiver

Features

front

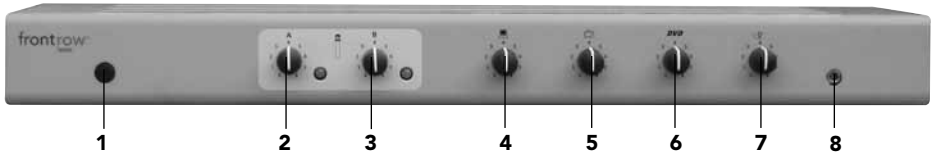



back

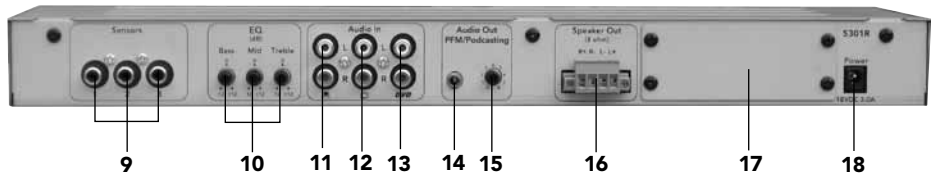

1. Power button
2. Microphone A volume control
3. Microphone B volume control
4. Audio In volume control (Computer)
5. Audio In volume control (TV/VCR)
6. Audio In volume control (CD/DVD)
7. Audio In volume control (MP3)
8. Audio Input jack (3.5mm – MP3)
9. Infrared ceiling or wall sensor inputs
10. EQ adjustment
11. Audio In jack (stereo RCA – CD/DVD)
12. Audio In jack (stereo RCA – TV/VCR)
13. Audio In jack (stereo RCA – Computer)
14. Audio Out jack (3.5mm) for podcasting & other
15. Audio Out volume control
16. Speaker terminals
17. Expansion bay for page override module (optional)
18. Power jack

11 5301R Lasso Receiver

Activate Receiver and Microphone

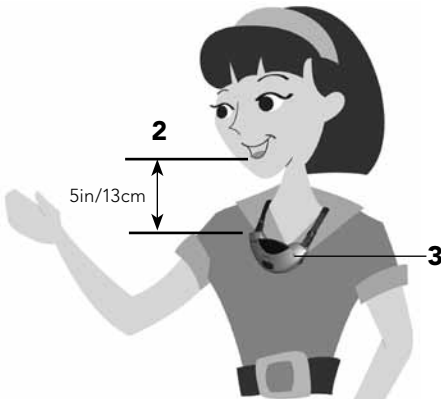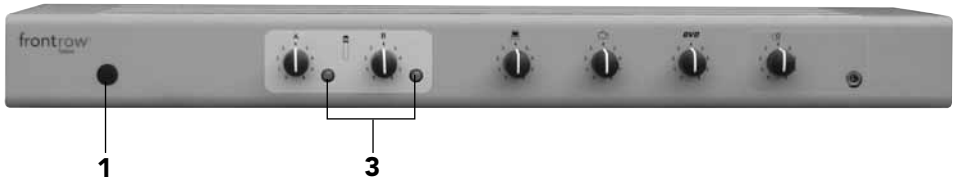

1. Press power button
Green..... Power On
2. Put microphone around neck and adjust strap so it is 5in. (13cm) from your mouth
3. Turn microphone on and check microphone A or B indicator light
Green..... Mic channel A/B detected or not detected
Red Microphone Off/Muted
4. Speak in a normal conversational tone while walking the entire room. Adjust the volume to a comfortable level.
5. For daily use, you do not need to turn the receiver on and off. The receiver will wake up from its energy-saving standby mode whenever you turn on a microphone or play audio through one of the audio in connections. The receiver will go back to sleep after a certain period whenever you turn off the microphone or stop playing audio.


12 5301R Lasso Receiver

Connecting to other Classroom Media

Your FrontRow Lasso can connect to other media to enhance the overall audio experience in your classroom. Ideally, these connections were made during installation; however, they can easily be made after the unit is installed using the audio cords that came with the system or standard audio cords from your local electronics store.

Example 1

Many classrooms use a computer as a multi-media "hub" that is connected to the internet or school network to download/stream and play all audio and video. For these classrooms, you may only need one audio input connection to the 5301R.

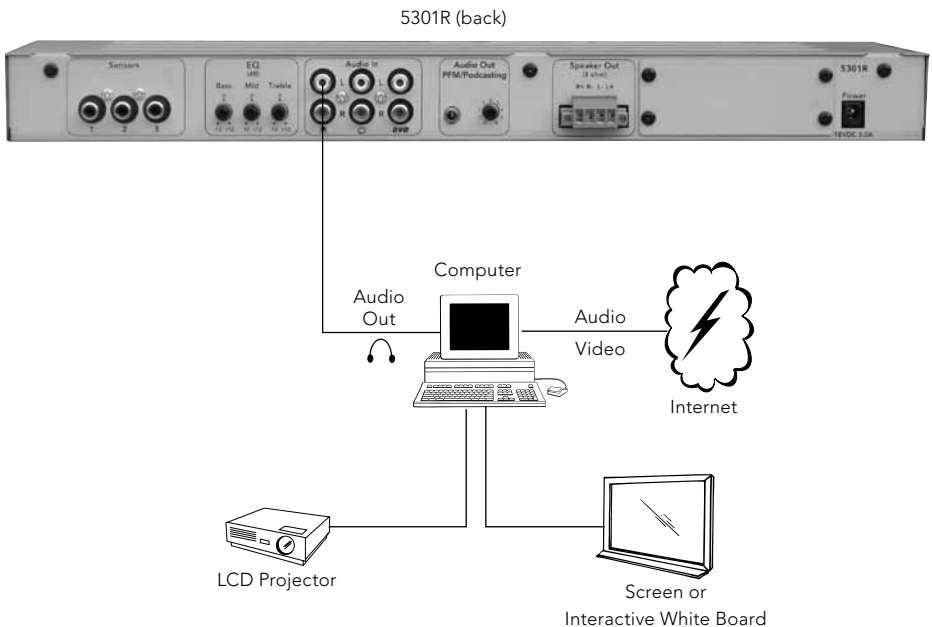


5301R Lasso Receiver

Connecting to other classroom media (cont.)

Example 2

Some classrooms use a computer as the multi-media "hub", but it is connected to a TV instead of an LCD projector. They also occasionally use the TV/DVD/VCR as a stand alone media. For these classrooms, you may need to use two auxiliary audio input connections to the 5301R.

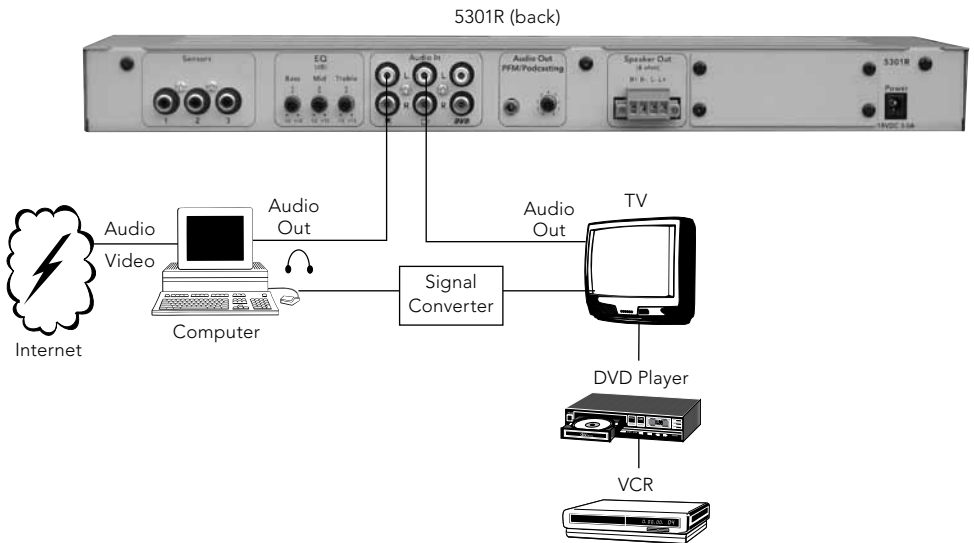


Example 3

Many teachers have MP3 players, portable CD players or other devices that move around the classroom. To amplify audio from portable electronics, it may be most convenient to connect these as needed through the MP3 jack on the front of the 5301R.




Example 4

Teachers can also connect either the 940TM or 950H mic to any audio source that's too far from the receiver to conveniently integrate directly.

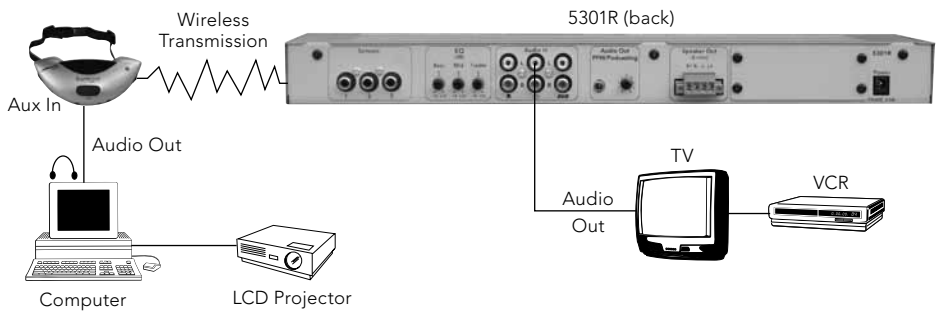

13 5301R Lasso Receiver

Auxiliary Output - Rebroadcasting to Personal FM Receivers

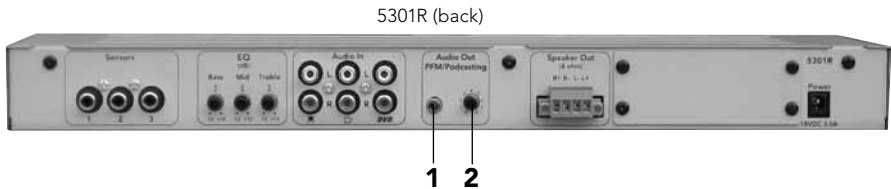

Allows rebroadcast of all voice and auxiliary audio directly to a hearing-impaired student's personal FM system.

1. Plug 3.5mm cord into audio out port on back of Lasso receiver. Depending on the device you are connecting, match the type of the other end of the cord to the aux in on the transmitter (typically 3.5mm).
2. Adjust **volume level setting for transmitter**
 - a. if device you are connecting is a line level input, set volume control nearer to maximum
 - b. if device you are connecting is a mic level input, set volume control nearer to minimum

Test and adjust as volume level as needed.

14 Troubleshooting

Receiver won't turn on (power light doesn't turn on)

- Verify that the power supply is plugged into both the receiver and a working wall outlet
- Test with another power supply

'Dead spots' or microphone crackling/noise

- Verify that you are not blocking either the emitters on the microphone or the sensors mounted around room
- If reception is interrupted or noisy when facing a certain direction, install an additional sensor in that area of the room (see *Installer Guide*)
- If using more than one microphone, verify that they are not on the same channel
- Recharge or replace the microphone batteries
- There may be "noisy" electrical wiring. Install an AC line filter (see *Installer Guide*)

No signal reception (channel indicator light on receiver is red)

- Check that the microphone is on
- Check that the microphone is not muted (940TM only)
- Verify that you are not blocking either the emitters on the microphone or the sensors mounted around the room
- If reception is interrupted when facing a certain direction, install an additional sensor in that area of the room (see *Installer Guide*)
- If using more than one microphone, verify that they are not on the same channel
- Recharge or replace the microphone batteries

Feedback (squealing)

- Lower the Microphone A or B Volume control(s) on the receiver
- Make sure that speakers are mounted as close as possible to the ceiling and to the listening area; avoid mounting speakers in the teacher's primary lecture area
- Position the microphone closer to mouth
- Set the gain switch on the pass-around microphone to "mid" or "low"
- Reduce treble EQ setting

Weak or no output from speaker(s)

- Increase the Microphone A or B Volume or Audio In Volume control(s) on the receiver
- If trying to amplify sound from a computer, DVD player, MP3 player, or other device, be sure the volume control on that device is turned completely up
- Position the microphone closer to mouth
- Set the gain switch on the pass-around microphone to "mid" or "high"
- Verify that the speakers have been properly installed

High or low pitched whine or hum coming through speakers

- There may be a ground loop with the system. Install a ground loop isolator (see *Installer Guide*)
- There may be "noisy" electrical wiring. Install an AC line filter (see *Installer Guide*)

Charger light won't come on or is blinking red

- Check that the charger is connected to a working power outlet
- The charger can charge only 950H and 940TM microphones with charge contacts. Refer to page 5, feature 12 to confirm that your microphone has these contacts.
- You may be attempting to charge an alkaline battery or a rechargeable battery that has reached the end of its useful life. Check the battery and replace with a FrontRow "silver sleeve" rechargeable battery.

15 Regulatory

receiver: part 15, subpart B

FrontRow Lasso Receiver 5301R
FrontRow Pro Digital Transmitter 940TM



Tested to comply with
FCC Standards

FOR HOME OR OFFICE USE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

FCC notes

The FrontRow Lasso active learning system is approved by the FCC (Federal Communications Commission). The use of the system may be governed by specific FCC rules and FCC licensing or notifications may be required. Consult your local FCC office for detailed information.

Phonic Ear receivers and transmitters, when required, are approved by the Federal Communications Commission (FCC) in the U.S. and Industry Canada. Other government approvals are available upon request. (Other international regulations may also apply.)

Any changes or modifications made to any government-approved element of this instrument, without the express approval of Phonic Ear, Inc. in writing, could void the user's authority to operate those elements of the system.



This product conforms with the essential requirements of European Union Directive/EU Directive 2004/108/EC EMC Directive and 2002/95 ROHS Directive. This product can be subject to interference at our operational frequency bands of 2.3 and 2.8 MHz, including harmonics, intermediate frequencies, and images thereof.



Electrical and electronic equipment (EEE) contains materials, components and substances, that could be dangerous or detrimental to human health and the environment if waste electrical and electronic equipment (WEEE) is not disposed of correctly. Products marked with the crossed-out dustbin shown here are electrical and electronic equipment. The crossed-out dustbin indicates that waste electrical and electronic equipment may not be disposed of with unsorted household waste and that it must be collected separately.

In developing and manufacturing your Phonic Ear product, we used high-quality materials and components that can be reused. Thus, when disposing of your waste electrical and electronic equipment, you must use a collection system designated for this purpose, regardless of whether you dispose of your waste at your local waste site or it is collected from your home. Please contact your local authority for further information.

IC notes

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

The term "IC:" before the radio certification number only signifies that Industry of Canada technical specifications were met.

The Page Override Module (618-88-500-00) is not intended for use with UL Listed Amplifiers For Fire Protection Signaling Systems or Control Units and Accessories for Fire Alarm Systems, Emergency Paging, Mass Notification or Life Safety to NFPA 70 National Electric Code or NFPA 72 National Fire Alarm and Signaling Code.

frontrow™

USA/Global

FrontRow
Corporate Headquarters
2080 Lakeville Highway
Petaluma, CA 94954-6713
toll-free: 800.227.0735
tel: 707.769.1110
fax: 707.769.9624
web: www.gofrontrow.com

Australia

Phonic Ear
12/97 Castlemaine Street
Milton Qld 4064
Australia
freecall: 1 800 PHONIC
fax: 1300 746 642
web: www.gofrontrow.com.au

Canada

Phonic Ear
6950 Creditview Road, Unit 1
Mississauga, ON L5N 0A6
toll-free: 800.340.9894
tel: 905.461.5300
fax: 905.677.7760
web: www.gofrontrow.com

Scandinavia

Phonic Ear A/S
Kongebakken 9
2765 Smørum
Denmark
tel: +45 3917 7101
fax: +45 3927 7900
web: www.gofrontrow.com
www.phonicear.com

New Zealand

Oticon New Zealand Ltd.
142 Lambton Quay
P.O. Box 9128
Te Aro, Wellington
toll-free: 800 OTICON
toll-free fax: 00800 FAX
OTICON
web: www.oticon.co.nz

United Kingdom

PC Werth Limited
Audiology House
45 Nightingale Lane
London SW12 8SP
tel: 020 8772 2700
web: www.soundfield.info